

S4563

IGNITION CONTROL

INSTRUCTION SHEET



- Internal indicators for diagnostic purposes (heat demand/air pressure/high limit/flame/alarm)
- Internal reset switch
- Internal Electro Magnetic Compatability (EMC) filter
- Combined ignition rod/flame sensing

SPECIFICATIONS

Model

Suffix A: atmospheric, direct burner ignition

Suffix B: atmospheric, direct burner ignition, flame relay or opto coupler output

Suffix C: fan assistant, direct burner ignition

Suffix D: fan assistant, direct burner ignition, flame relay or opto coupler output

Supply voltage

220 ... 240 Vac, 50 Hz

Power consumption

10 VA

Humidity

90% RH max. at 40 °C

Ambient temperature

0 ... 60 °C

Electrical rating

All outputs separate: 220 ... 240 Vac, 50 Hz, 1 A, $\cos \varphi > 0.6$

All outputs together: 3 A (max)

Flame opto coupler: 5 Vdc, 10 kΩ

Electrical connection

High voltage spark: 2.8 x 0.5 mm spade terminal

Flame sensing: 6.3 x 0.8 mm spade terminal

Ground: 4.8 x 0.8 mm spade terminal

PCB connectors: STOCKO/PHILIPS KMT

Housing

Protection: IP 00*

Material: ABS UL94 HB (optional PPO UL94 V0)

* Protection against electric shock must be provided by the appliance in which the control is installed.

Timing (depending on O.S. number)

Waiting time (T_w)/Prepurge time (T_p): 0, 1.5, 5, 10, 20 or 30 s

Safety time (T_s): 2.2, 2.7, 3.3, 5, 7, 10, 15, 22, 33 or 50 s

Extended spark ignition time and delayed flame

output (IP only): 0 ... T_s s (dependent on elaps of safety time)

Self check time (T_c): 1.5 s

Flame sensing

Min. flame current: 0.9 μA

Response time on: > 0.2 s

Response time off: < 1 s

APPLICATION

The S4563 ignition control provides automatic ignition and flame supervision either in direct gas burner or in intermittent pilot gas burner applications with safety timer.

The S4563 ignition control functions in accordance with EN 298.

S4563A code A/M/C/L/X/N

S4563B code A/M or T/C/L/X/N

S4563C code F/M/C/L/X/N

S4563D code F/M or T/C/L/X/N

FEATURES

- Flame supervision.
- Built-in 5 ... 50 Hz spark ignition.
- External reset and alarm.
- Factory set safety timer 0 ... 50 s
- Factory set prepurge/waiting timer 0 ... 30 s
- Supply voltages of 220 ... 240 V in a single product.
- Full operating sequence after flame loss.
- Non volatile lock-out according EN 298.
- Protective impedance on flame rod

Optional

- Extended spark ignition.
- Factory set delayed flame output with stabilisation time T_{stab} between 0 ... T_s s, only for Intermittent Pilot (IP) applications.
- 8 mm separation for flame opto coupler.
- Internal wiring for: two staging
external ignition
closed loop sparking
sparking to ground

Cable length

Flame sensing: 1000 mm max.

Ignition: 500 mm max.

Other peripherals: 1000 mm max.

Ignition

Spark voltage:

standard 15 kV at 40 pF load

high 23 kV at 40 pF load

Repetition rate: 5 ... 50 Hz (depending on O.S. number)

Spark energy:

standard 3 μ As

high 10 μ As

Max. spark gap: 3.5 mm

Remark

Flame opto coupler:

- Opto coupler interface needs a debounce time > 20 ms in order to prevent noise caused by transients.
- Opto coupler output is separated by reinforced insulation, so it can be used in SELV circuits.

Flame relay:

- The flame relay contacts are not separated by reinforced insulation and as a result it is not intended to feed SELV circuits

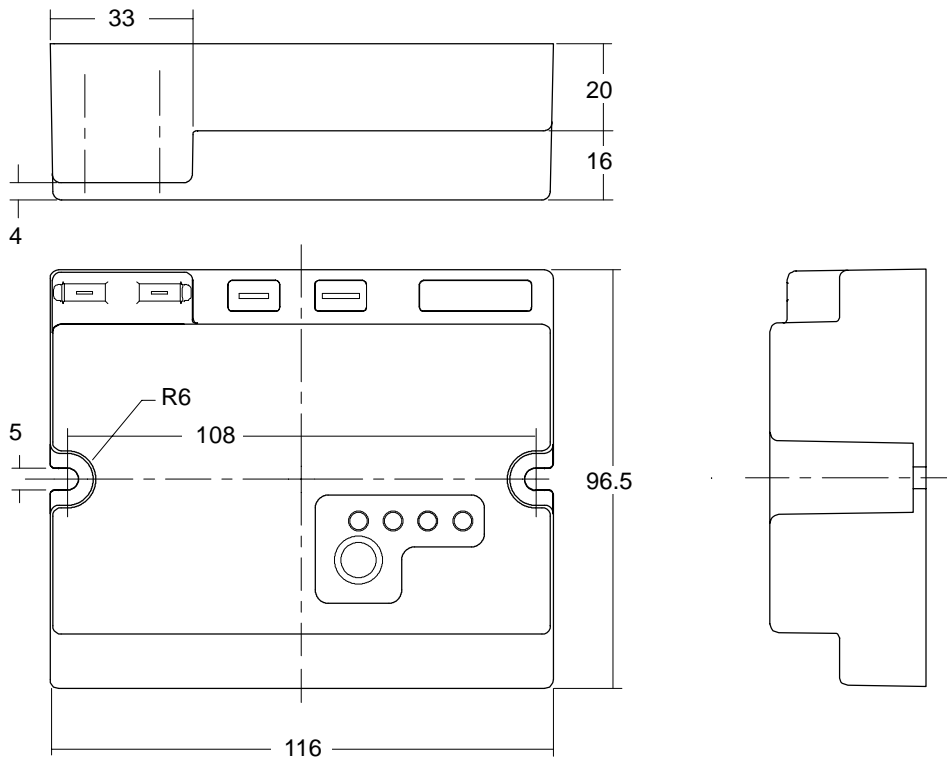


Fig. 1. Outline drawing

SYSTEM OPERATION

Suffix A, B (see fig. 12.)

When there is a call for heat a selfcheck time followed by a waiting period (T_w) elapses before built-in igniter and gas valve are switched on.

The ignition spark ignites gas and resulting flame is detected by the flame rod.

Ignition is switched off after a predetermined extended ignition time and flame establishment.

For suffix B flame recognition will be acknowledged after a predetermined stabilisation time (T_{stab}) by a flame relay or opto coupler.

Both the extended ignition time and the stabilisation time are dependent on elaps of safety time.

If flame is not established within the safety time (T_s), the S4563 ignition control locks out.

If the flame is lost during normal run, the S4563 ignition control repeats start sequence.

Optional for diagnostic purposes the sequence can be optically indicated as there are: call for heat present, high limit not tripped and flame present.

Suffix C and D (see fig. 13.)

When there is a call for heat the fan starts running through the no air position of the air proving switch.

When sufficient air flow is proven by the air proving switch, a prepurge time T_p elapses before the built-in igniter and gas valve are switched on.

The ignition spark ignites gas and resulting flame is detected by the flame rod.

Ignition is switched off after a predetermined extended ignition time and flame establishment.

For suffix D flame recognition will be acknowledged after a predetermined stabilisation time (T_{stab}) by a flame relay or opto coupler.

Both the extended ignition time and the stabilisation time are dependent on elaps of safety time.

NOTE 5.: In case of 2 stage systems a low capacity valve V_1 and a high capacity valve V_2 are physical two separated valves. The appliance can be started on low capacity (V_1 energized) and after flame establishment the high capacity valve V_2 is energized, so the appliance operates at 100% capacity. (See fig. 6. and 7. for typical connection diagram).



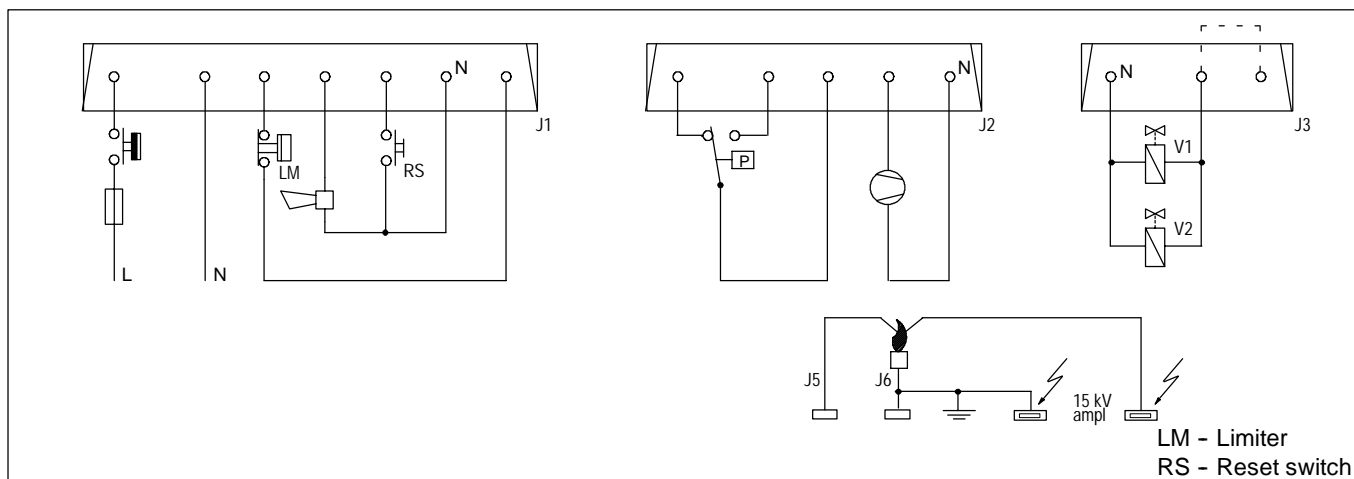


Fig. 4. Connection diagram S4563C

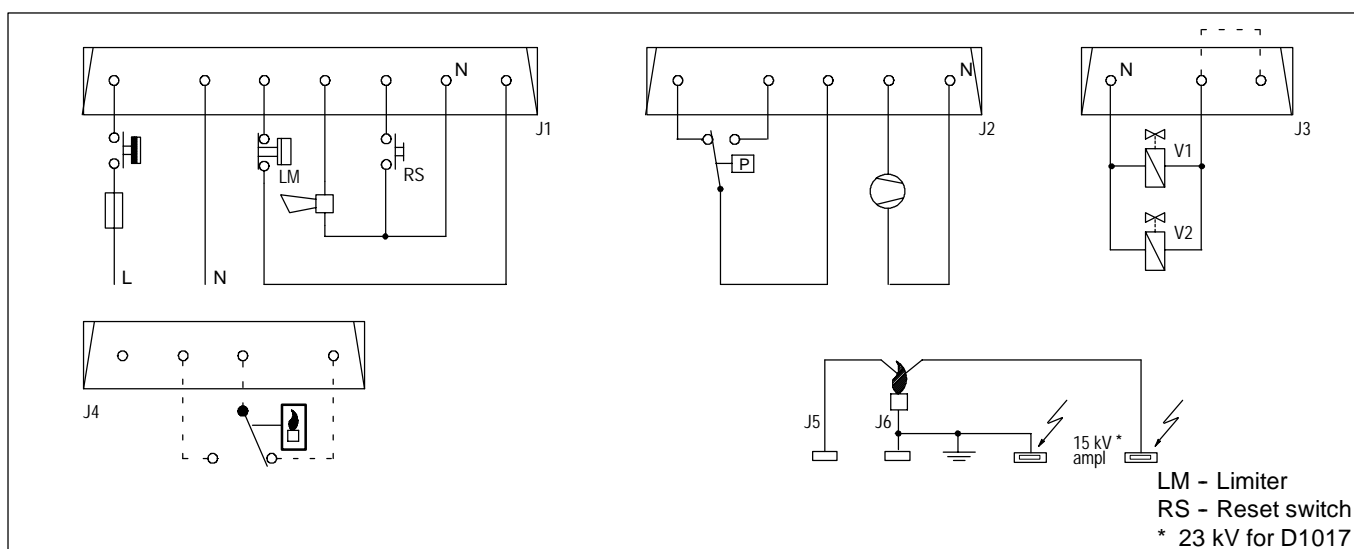


Fig. 5. Connection diagram S4563D

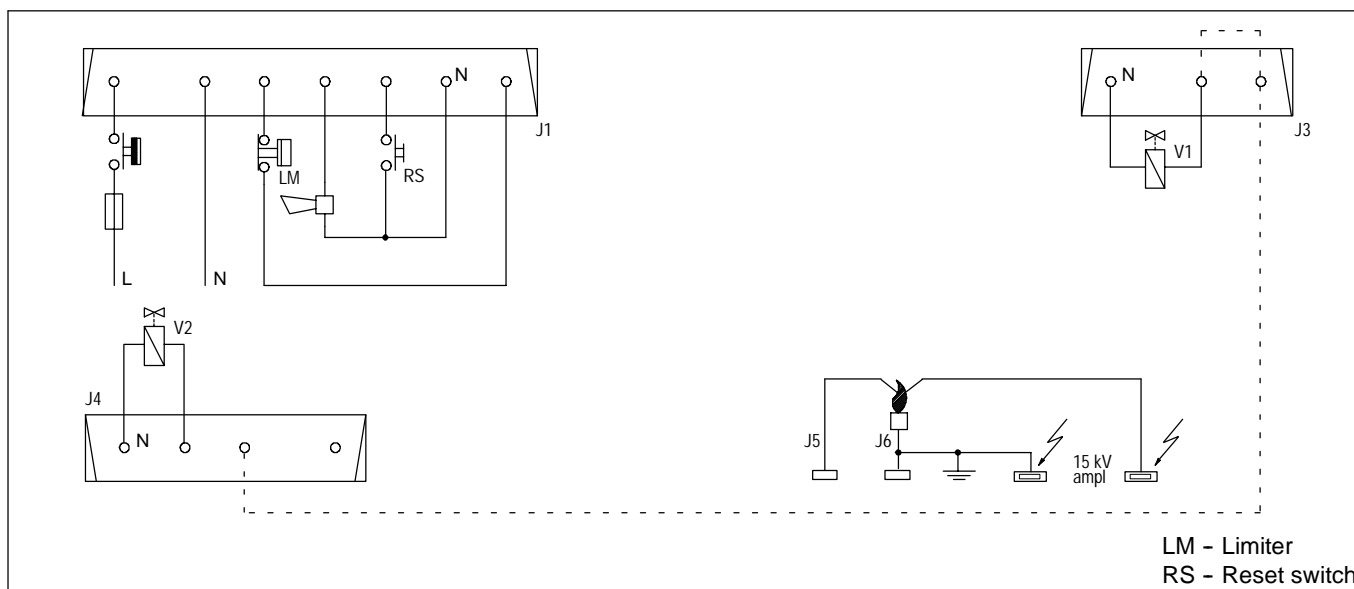


Fig. 6. Connection diagram S4563B for IP or two stage systems

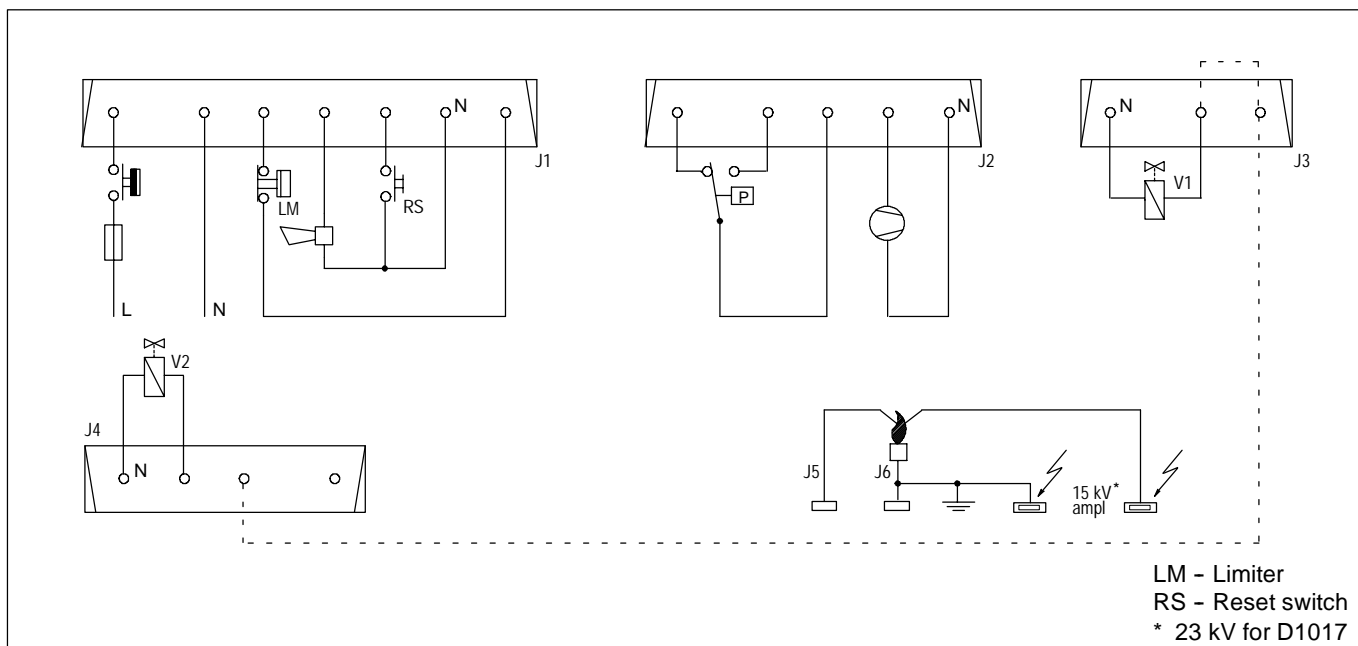


Fig. 7. Connection diagram S4563D for IP or two stage systems

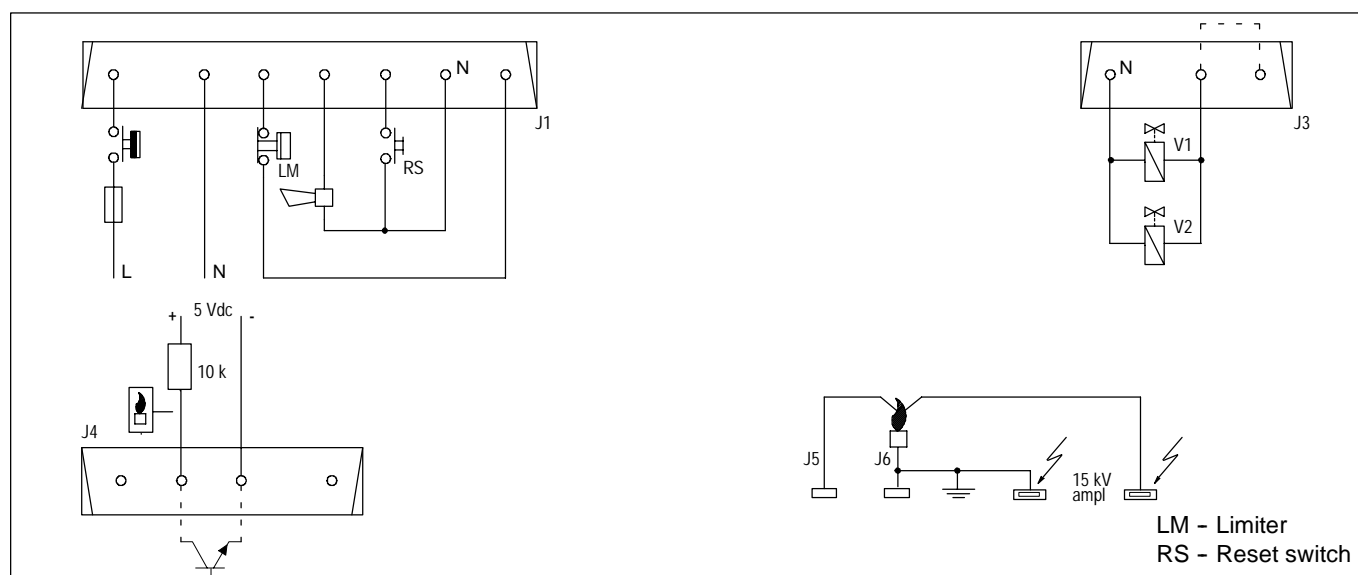


Fig. 8. Connection diagram S4563B with isolated flame opto coupler

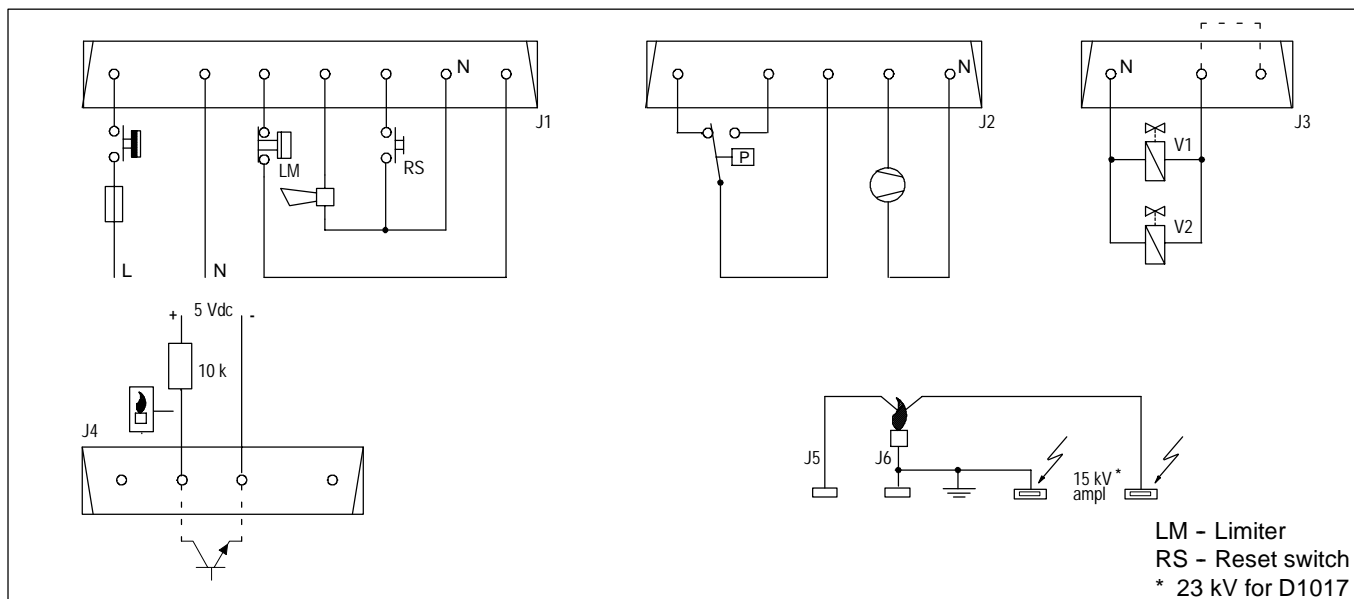


Fig. 9. Connection diagram S4563D with isolated flame opto coupler

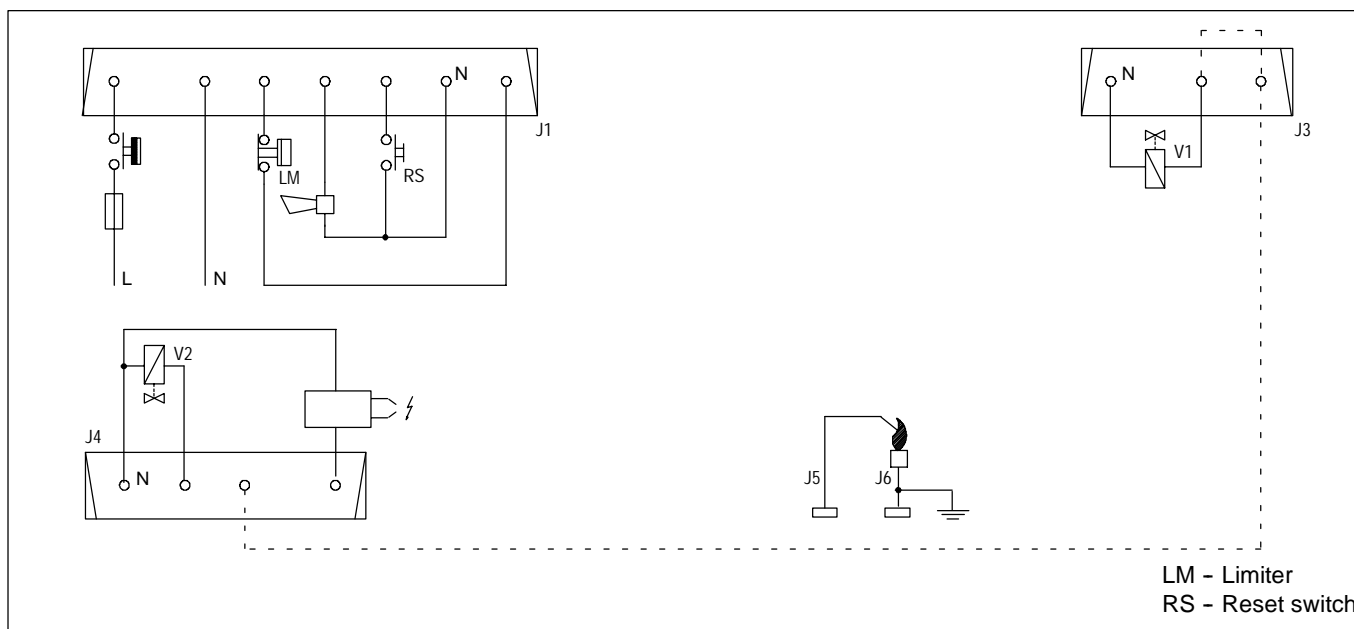


Fig. 10. Connection diagram S4563B for two stage systems with external igniter

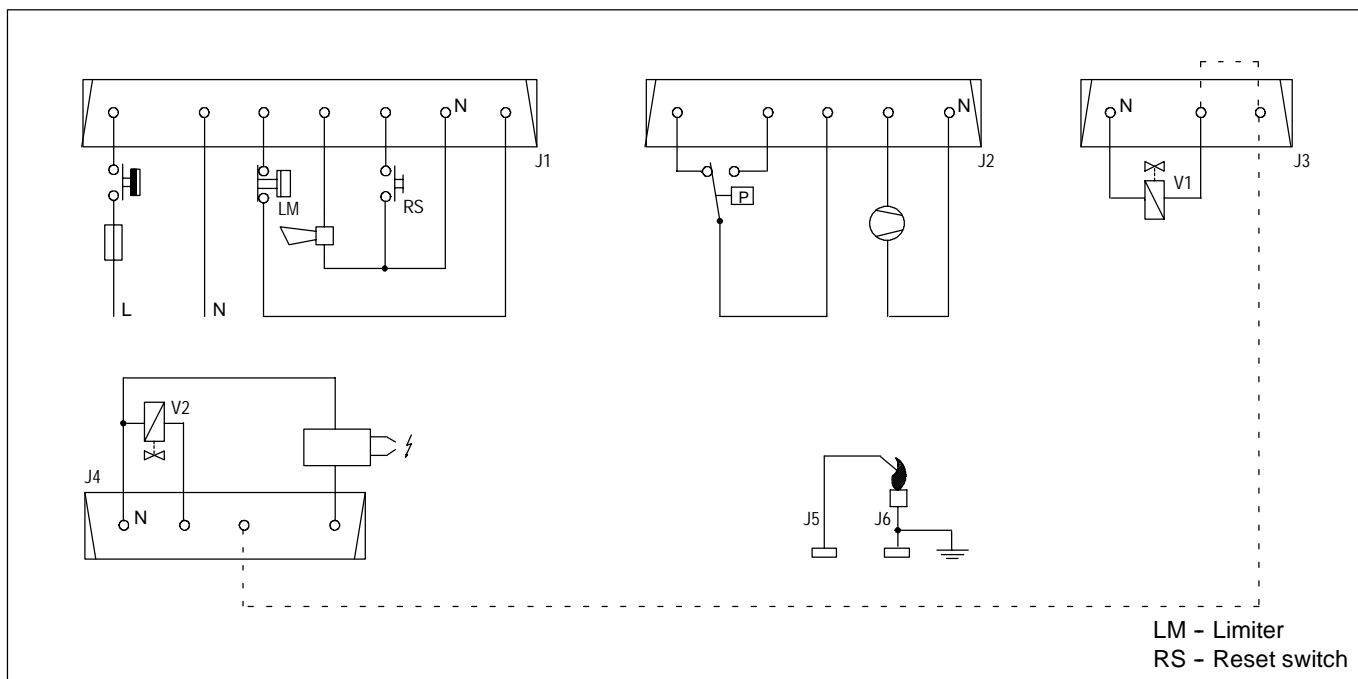


Fig. 11. Connection diagram S4563D for two stage systems with external ignition

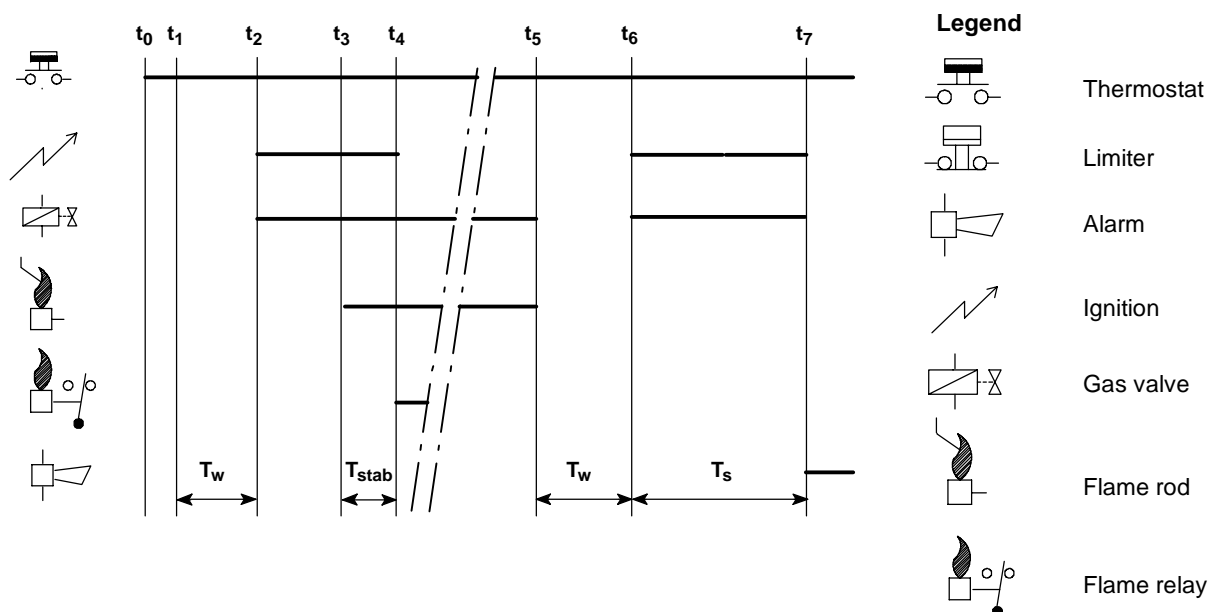


Fig. 12. Functional diagram S4563A and B

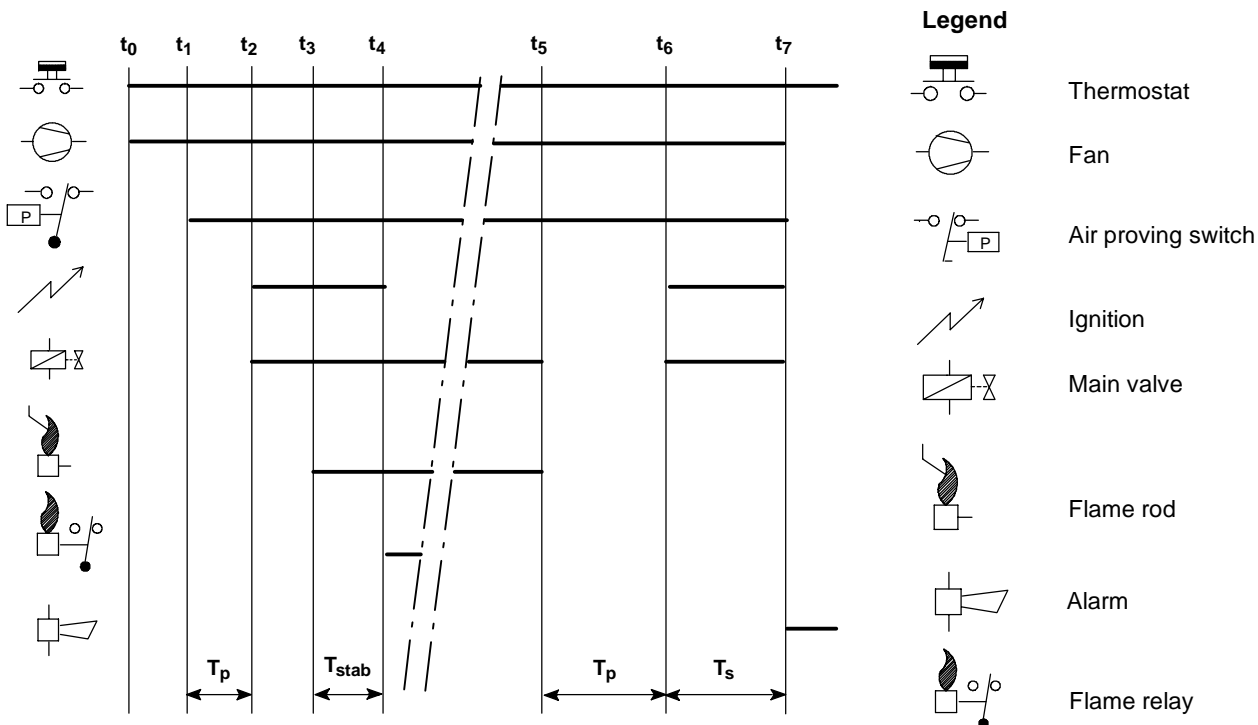


Fig. 13. Functional diagram S4563C and D

INSTALLATION AND CHECKOUT

IMPORTANT

Installer must be a trained experienced service man.

Disconnect power supply to prevent electrical shock and/or equipment damage.

Wiring must be in accordance with local regulations.

Before installing or replacing any control check that type number is correct for the application.

The appliance manufacturer's instructions should always be followed when provided. If such instructions are not provided see fig. 2., 3., 4. and 5. for typical systems.

Ensure combustion chamber is free of gas before start up.

Conduct a thorough check out when installation is completed.

At the first start the ignition control can be in lock-out; reset to free the control.

WARNING

After moving S4563 ignition control from outdoor to indoor conditions, condensation may occur. Do not connect a condensated ignition control to mains.

Mounting

The ignition control should be mounted on a flat surface by means of 2 mounting holes (see fig. 1.).

Mounting position

The ignition control functions position independently.

To ensure reliable long term operation mount ignition control at a position in the appliance with a low ambient temperature and low radiation.

To suppress Radio Frequency Interference (RFI) the spark electrode cabling should be mounted in a sufficient shielded environment.

In order to get maximum effect of the optional built-in EMC filter, assure a short connection of the GND tab (J6) to grounded metal shield.

Wiring

- Use untinned receptacles for easier connection.
- Use leadwire which can withstand 105 °C ambient.
- Use leadwire which is proven against moisture.
- Wiring between ignition control and spark sensing electrode should have good quality insulation, suitable for the temperatures encountered.



CAUTION

If ignition frequency ≥ 25 Hz or pulse energy ≥ 45 μ As the ignition cable and its connections shall have a protection against electrical shock.



CAUTION

Never combine high tension wiring with other wiring.

Fusing

Ignition control should be externally fused to prevent damage to ignition control, wiring or peripherals.

Prescribed external fuse: < 16 A slow max

Supply voltage polarity



WARNING

If ignition control seems to operate normally but does not detect ignition flame, check for right polarity of power supply (line, neutral).

Spark gap

Refer to the appliance manufacturer's instructions for recommended ignition electrode position.

Checking flame current

- The minimum value should be 0.9 μ A.
- To check flame current connect a DC micro-Ampèremeter between flame sensing wire and flame sensor rod.
- If flame current is insufficient check that flame sensing rod is fully enveloped by the flame and that burner is reliable grounded to ignition control.

Checkout

After installation, set burner system in operation and observe through a complete cycle to ensure that burner system components function correctly.

GENERAL CONSIDERATIONS

The ignition control should be externally fused.

The ignition control contains no serviceable parts. Any attempt of replacement of parts will affect the safety of this device and is therefore not allowed.

High temperatures will affect product life.

When the ignition control is built-in an appliance, the total protection must be IP 40 at least.

To ensure reliable long term operation, mount ignition control at a position in the appliance with a low ambient temperature and a low radiation.

For safety a high limit thermostat must be connected in accordance with the applicable appliance standard.

The earth connection between ignition control and shield metal should be as short as possible.

NOTE: Electrical rating of connected controls and air proving switch should be appropriate for the load that is switched by the ignition control.

Combustion Controls Center Europe

Phileas Foggstraat 7, Emmen
P.O. Box 83
7800 AB Emmen
NL-The Netherlands
Tel: +31 (0)591 695911
Fax: +31 (0)591 695200